

READ BEFORE BEGINNING INSTALLATION

Informational Sheet for the Installer

***Fillers** – Fillers will need to be trimmed on site to allow them to be scribed to the wall if needed. Please install fillers in any location where it appears the door may bind.


***Hinge Restrictors** – You may have received a bag with a small number to install where needed. These are used in situations where you don't want the door opening to its full 110 degrees. Only 1 is needed for most doors (install in one hinge)



Youtube has many videos on how to install a Blum Hinge Restrictor. [How to install restrictor clips video - Click here](#)

***Watch for Finished Ends** – Every cabinet has a specific location – If it's on an end, the side should be finished. Don't hang the wrong cabinet. Same sized cabinets may have different finished ends.

***Refrigerator End Panels** – These may come oversized so you can scribe them to the wall and place them at your preferred depth for your refrigerator model. This may require the upper cabinet above the refrigerator to be furred out to match the panel depth.

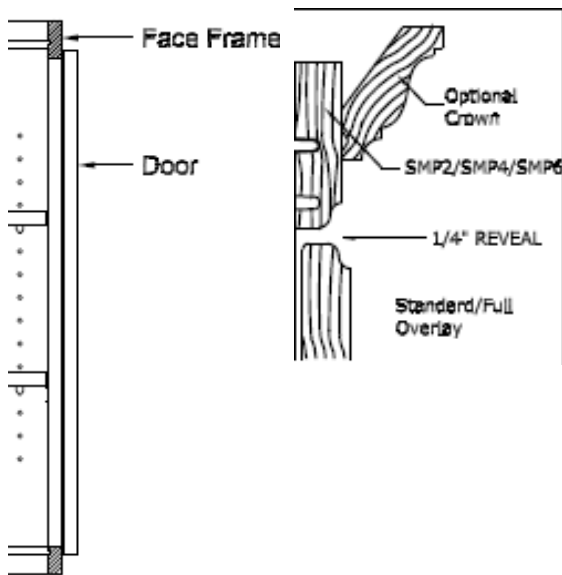


Common Mistake

Do not hang wall cabinets upside down.

Stop & Identify top BEFORE removing the doors!

There is a larger face frame reveal on the top for applying stacking/fascia molding (SMP or MP) and crown molding.

Pin to the face frame Attach from inside or the top

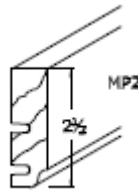

v/s

